COOKTOP PARTS

For Model: RF364PXMW0, RF364PXMQ0, RF364PXMT0, RF364PXMV0
(White) (Designer White)(Designer Biscuit) (Biscuit)

30" ELECTRIC CERAN
FREESTANDING RANGE
SELF CLEAN OVEN

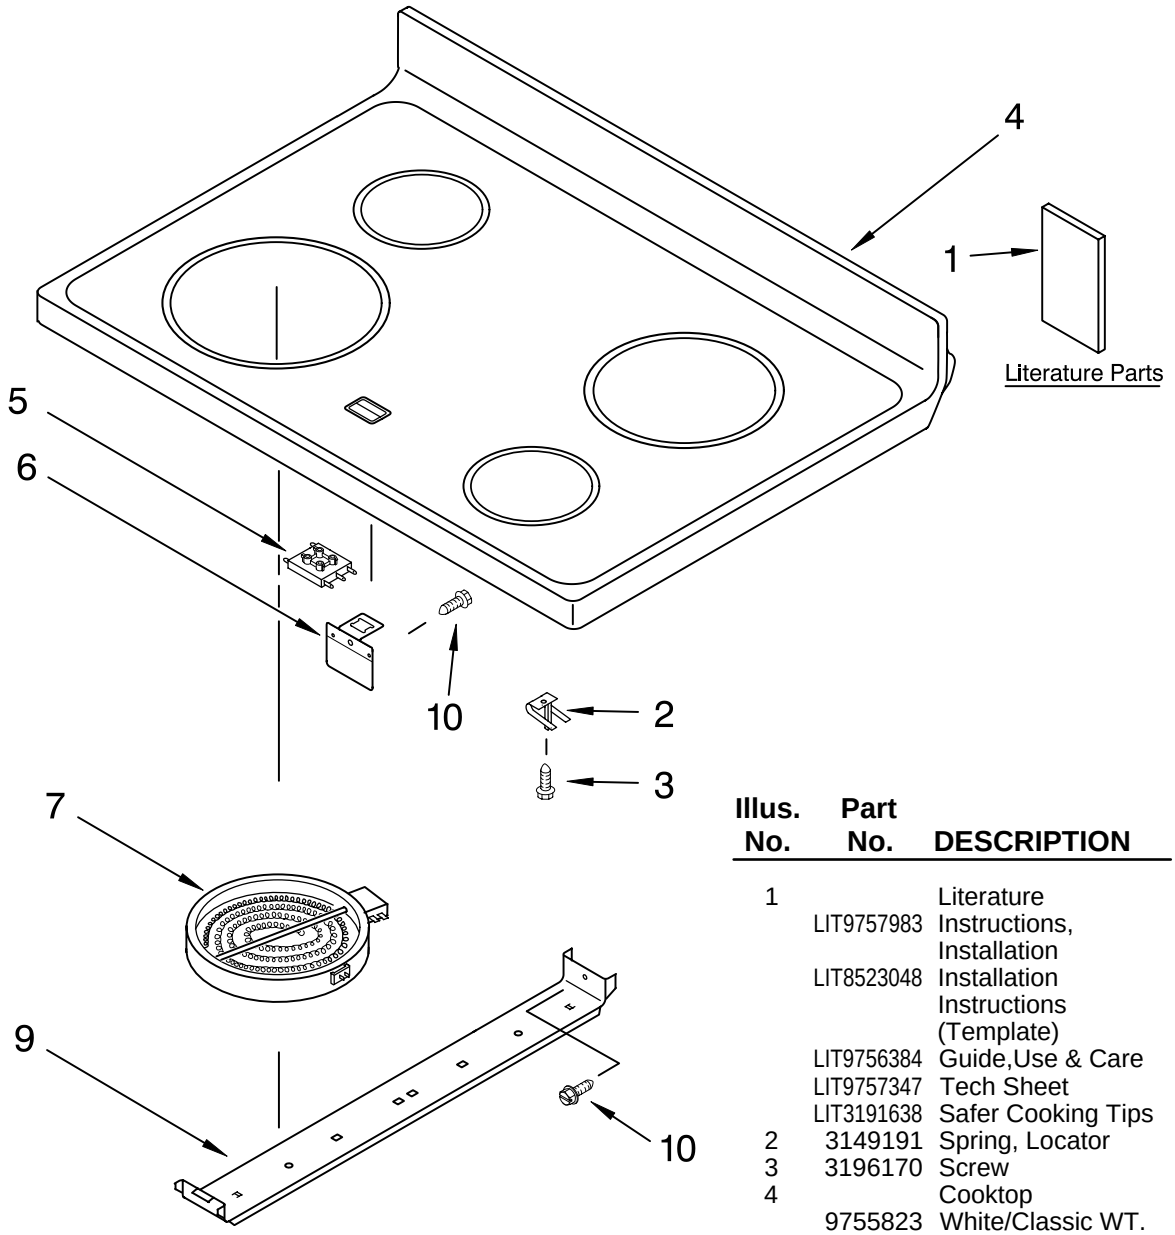

Illus. No.	Part No.	DESCRIPTION
1		Literature
	LIT9757983	Instructions, Installation
	LIT8523048	Installation Instructions (Template)
	LIT9756384	Guide,Use & Care
	LIT9757347	Tech Sheet
	LIT3191638	Safer Cooking Tips
2	3149191	Spring, Locator
3	3196170	Screw
4		Cooktop
	9755823	White/Classic WT.
	9755822	White/Bk. Glass
	9755833	Biscuit/Honeycomb
	9755836	Biscuit/Bk. Glass
5	8523740	Light, Indicator (Hot Surface)
6	8524063	Bracket, Ind Light
7		Element, Surface
	8523695	2000 W − LF,RR
	8523697	1500 W − LR,RF
9	3196454	Bracket, Element
10	3196165	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: RF364PXMW0, RF364PXMQ0, RF364PXMT0, RF364PXMV0
(White) (Designer White)(Designer Biscuit) (Biscuit)

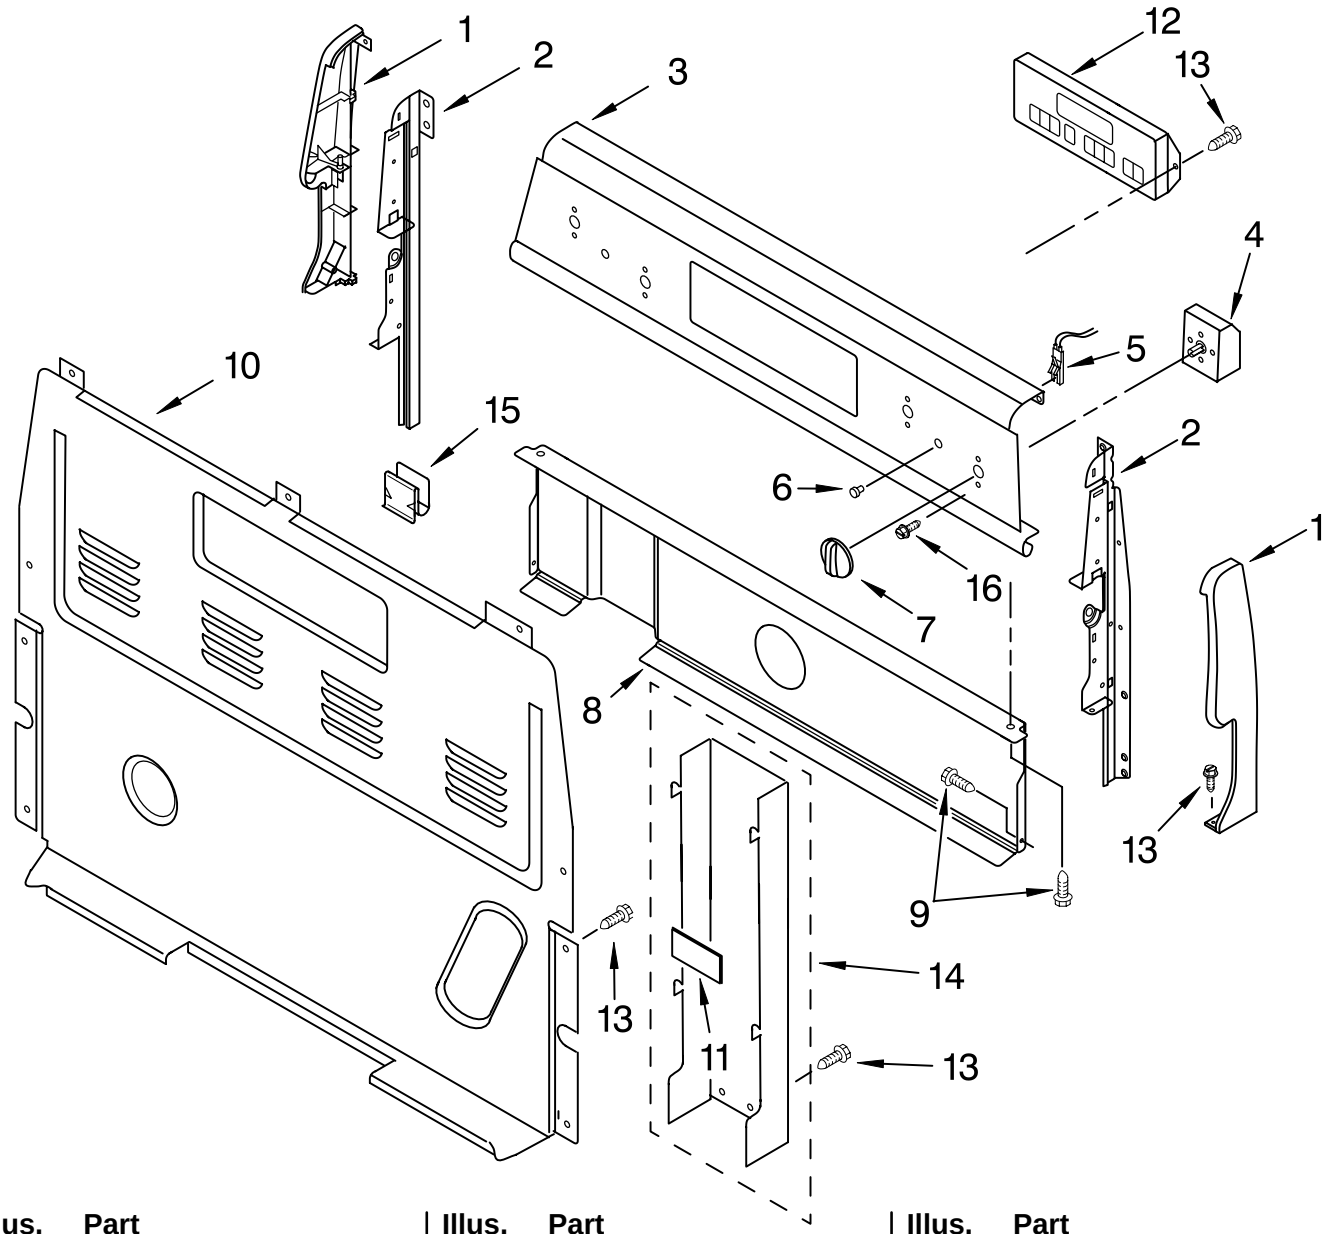

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	3186190	White Left Hand
	3186191	White Right Hand
	3186188	Black Left Hand
	3186189	Black Right Hand
	8272507	Biscuit Left Hand
	8272508	Biscuit Right Hand
2		Support, Endcap
	8523408	Left Hand
	8523409	Right Hand

Illus. No.	Part No.	DESCRIPTION
3		Panel, Backguard
	3186173	White
	3186171	Black
	8273510	Biscuit
4		Switch, Infinite
	3148952	Left Front
	3148953	Left Rear
	3148952	Right Rear
	3148953	Right Front
5	8523265	Light, Indicator Surface Unit (2)
6	3196068	Lens, Light (2)

Illus. No.	Part No.	DESCRIPTION
7		Knob, Infinite (4)
	8522565	White
	8522566	Black
	8522567	Biscuit
8	8523280	Shield, Heat
9	4449746	Screw
10	8272473	Cover, Upper
11	9757309	Insulator, Card
12		Control, Range
	6610383	White
	6610384	Black
	6610385	Biscuit
13	3196178	Screw
14	9757965	Cover, Box
15	8273564	Clip
16	3400882	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Model: RF364PXMW0, RF364PXMQ0, RF364PXMT0, RF364PXMV0
(White) (Designer White)(Designer Biscuit) (Biscuit)

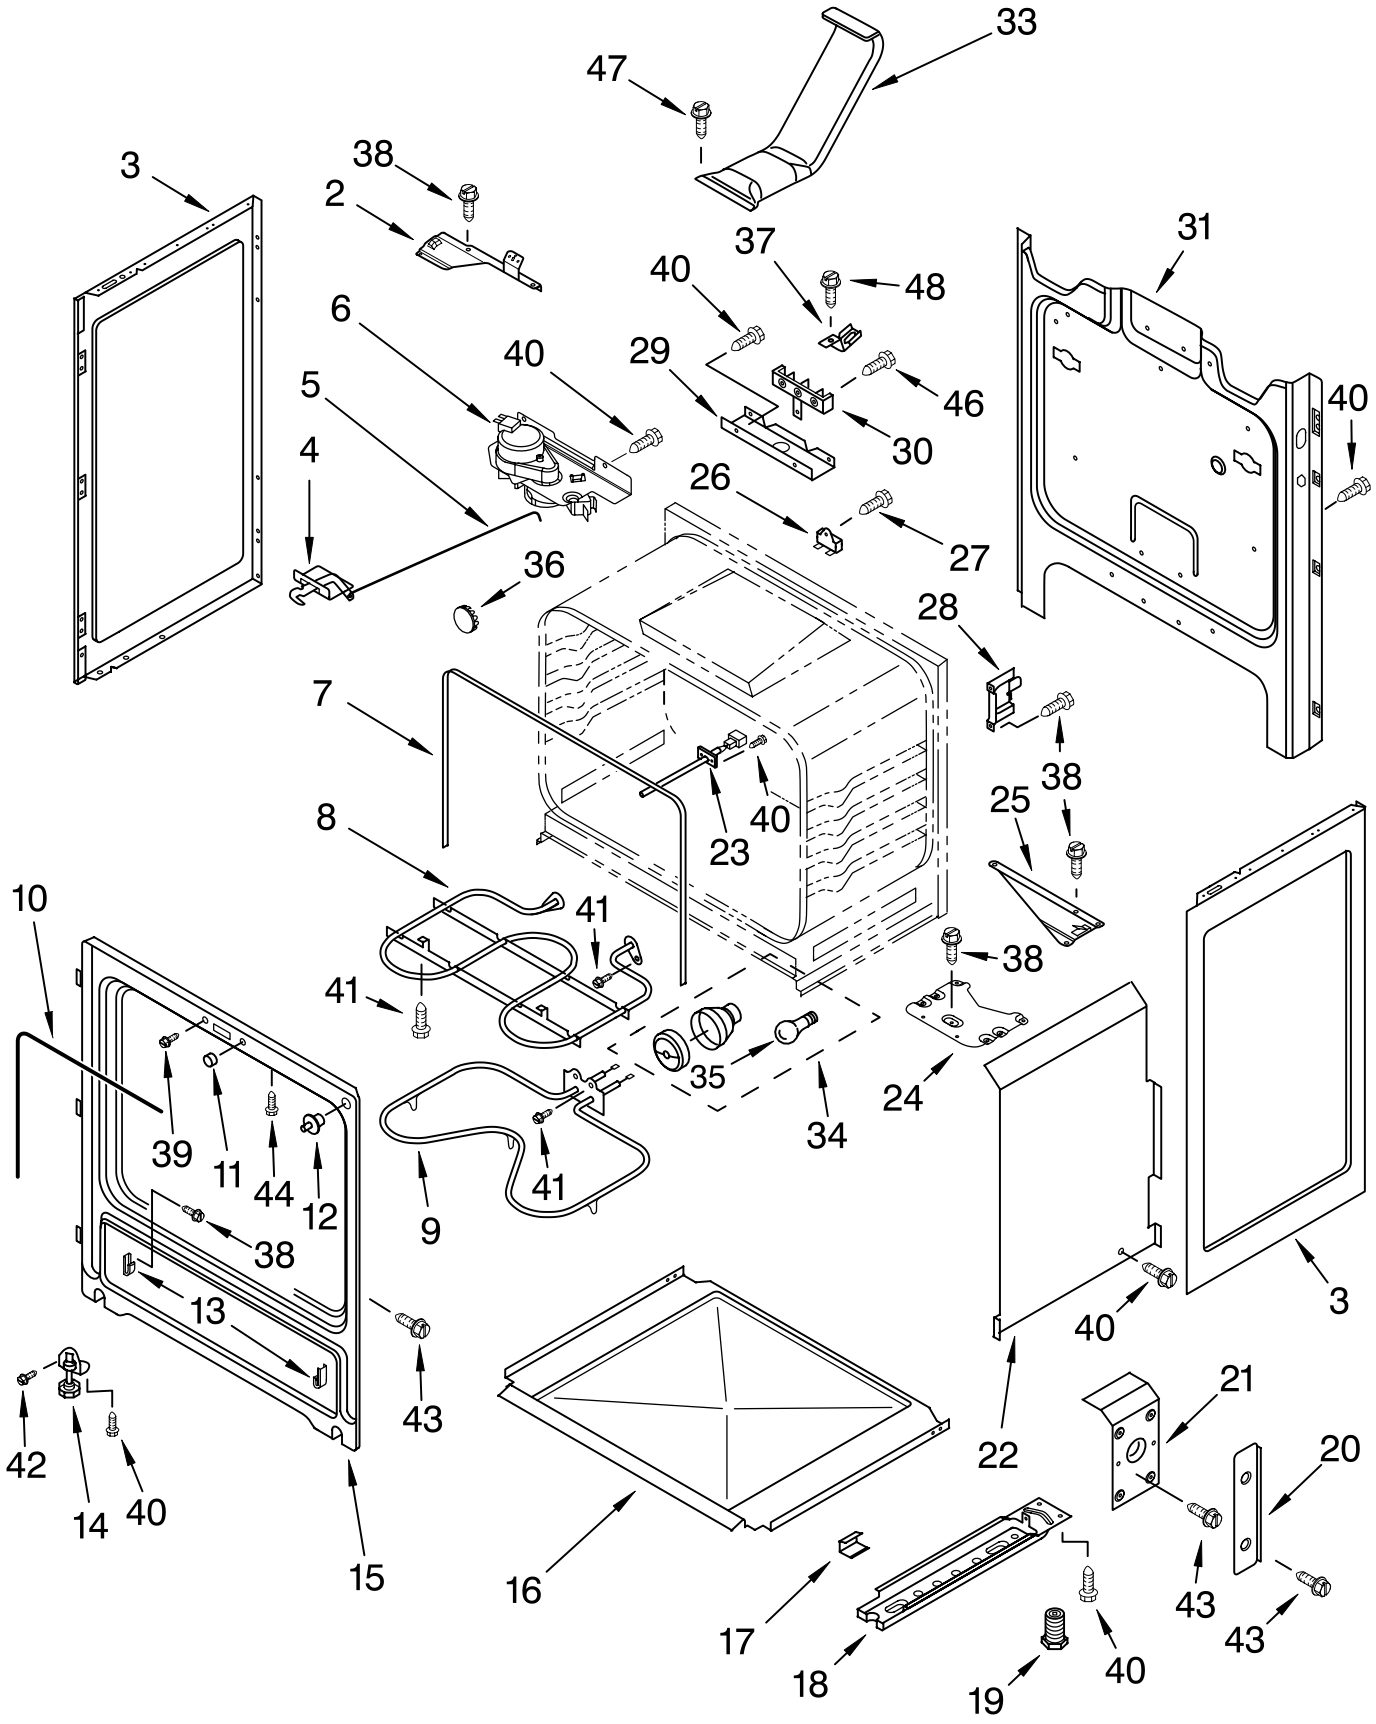

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Model: RF364PXMW0, RF364PXMQ0, RF364PXMT0, RF364PXMV0
(White) (Designer White)(Designer Biscuit) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
2	8273905	Support, Corner LR
3		Panel, Side (2)
	8053830	White−Textured
	8272519	Biscuit−Textured
4	3196119	Latch, Door
5	3196961	Rod, Latch
6	3196958	Latch Ass'y, Rear
7	3195737	Seal, Oven Flange
8	8053712	Element, Broil
9	8053713	Element, Bake
10	8522416	Seal, Oven Door
11	3196392	Spacer, Door
12	3195993	Switch, Door
13	3195546	Glide, Drawer (2)
14	3196037	Foot, Front (2)
15	8522694	Frame, Front
16	8054068	Tray, Insulation
17	3196576	Clip, Panel (6)
18	8053335	Rail, Base (2)
19	312701	Foot, Rear (2)
20	3196091	Shield, Outer (2)
21	3196092	Shield, Inner (2)
22	8523803	Retainer, Side (2)
23	8273902	Sensor, Oven
24	3195736	Support, Front (2)
25	3195987	Support, Corner RR
26	3196548	Fuse, Thermal
27	3196172	Screw
28	3186116	Support, Oven (2)
29	3186034	Bracket, Service
30	9757136	Block, Terminal
	112432	Nut (3)
31	8274034	Back, Main
33	8522673	Flue
34	3196701	Light Socket Assy
35	311255	Bulb, Oven Light
36	3196439	Button, Plug
37	313660	Ground Strap
38	3196165	Screw
39	3196168	Screw
40	3196178	Screw
41	3196174	Screw
42	3196179	Screw
43	3196177	Screw
44	3196176	Screw
46	3400016	Screw
47	3196566	Screw
48	3196173	Screw, Ground

INSULATION

8272616	Insulation, Wrap
8272612	Insulation, Back
8272613	Insulation, Vent

DOOR PARTS

For Model: RF364PXMW0, RF364PXMQ0, RF364PXMT0, RF364PXMV0
(White) (Designer White)(Designer Biscuit) (Biscuit)

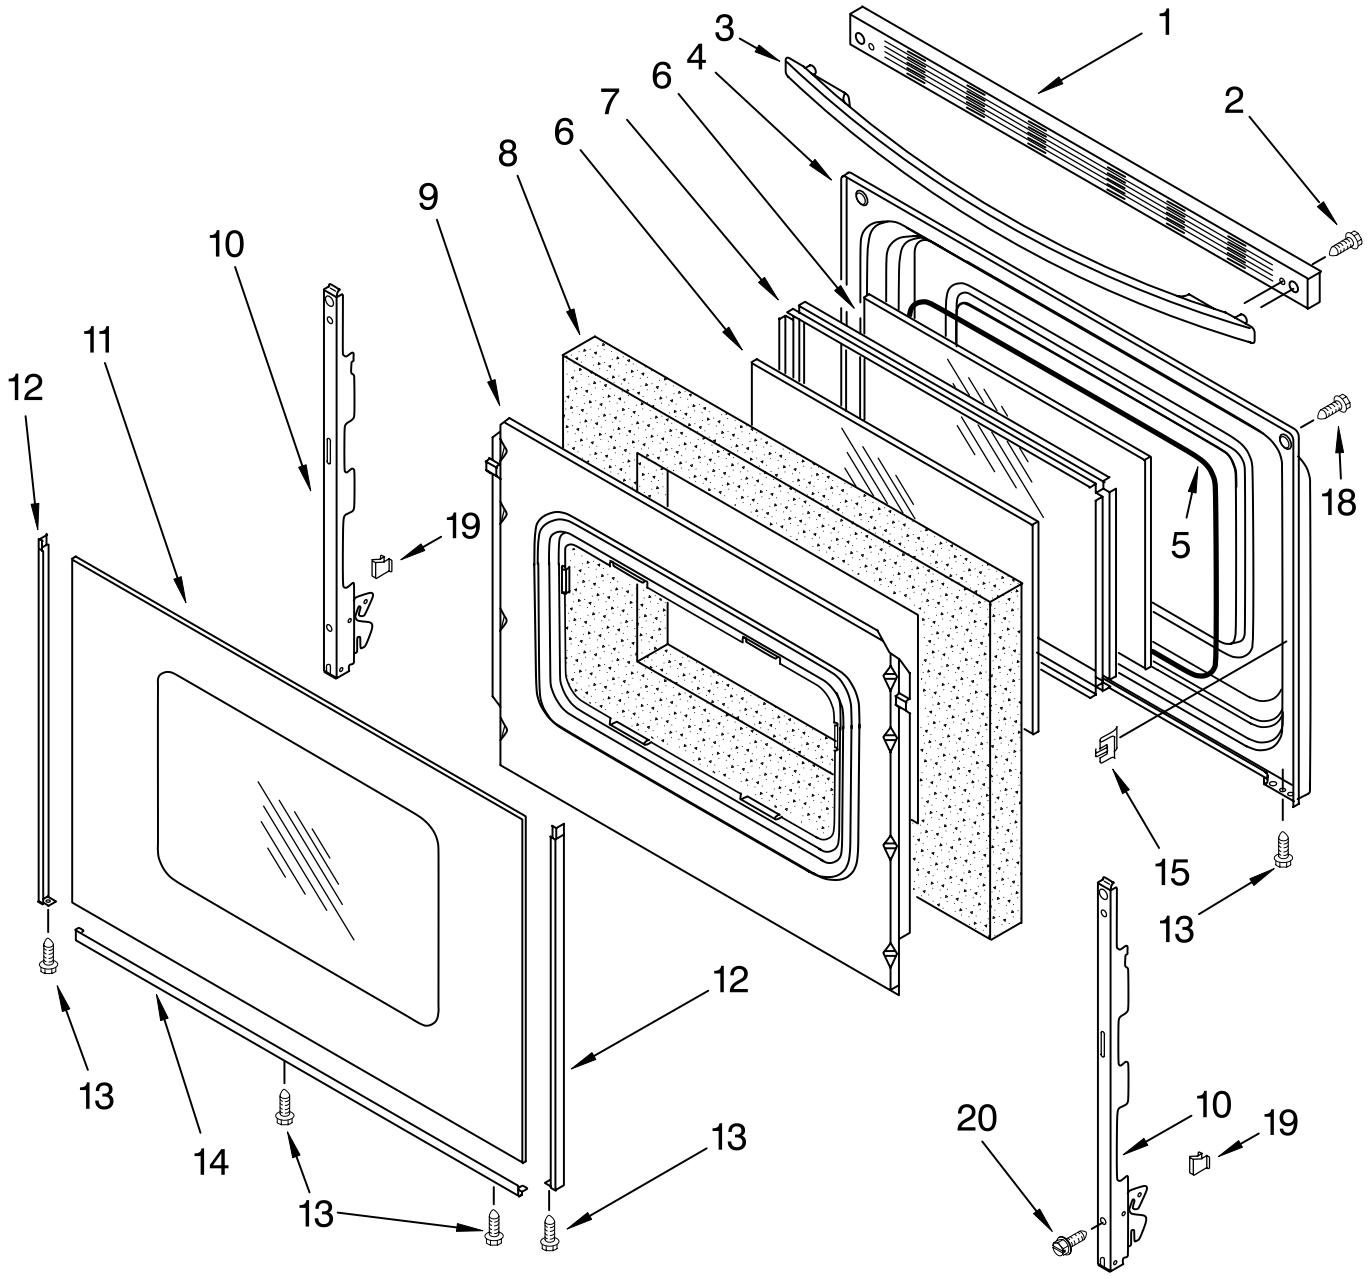

DOOR PARTS

For Model: RF364PXMW0, RF364PXMQ0, RF364PXMT0, RF364PXMV0
(White) (Designer White)(Designer Biscuit) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		Trim, Door Top
	8522433	White
	3196819	Black
	8522434	Biscuit
2	3196164	Screw
3		Handle, Door
	8522444	White
	3195922	Black
	8522445	Biscuit
4	3186296	Liner, Door
5	8522415	Seal, Window
6	3186282	Glass, Inner (2)
7	3186290	Frame, Glass
8	8272618	Insulation, Door
9	3186299	Retainer, Insul.
10	8053807	Hinge, Door (2)
11		Glass, Outer Door
	8053481	White
	8053479	Black
	8273525	Biscuit
12		Trim, Side
	8523172	White Left Hand
	8523171	Black Left Hand
	8523173	Biscuit Left Hand
	8523166	White Right Hand
	8523165	Black Right Hand
	8523167	Biscuit Left Hand
13	3196160	Screw
14		Trim, Lower
	8523175	White
	8523177	Black
	8523178	Biscuit
15	3196025	Clip, Glass (4)
18	3196161	Screw
19	3196925	Clip, Door Stop
20	3196165	Screw

DRAWER & BROILER PARTS

For Model: RF364PXMW0, RF364PXMQ0, RF364PXMT0, RF364PXMV0
(White) (Designer White)(Designer Biscuit) (Biscuit)

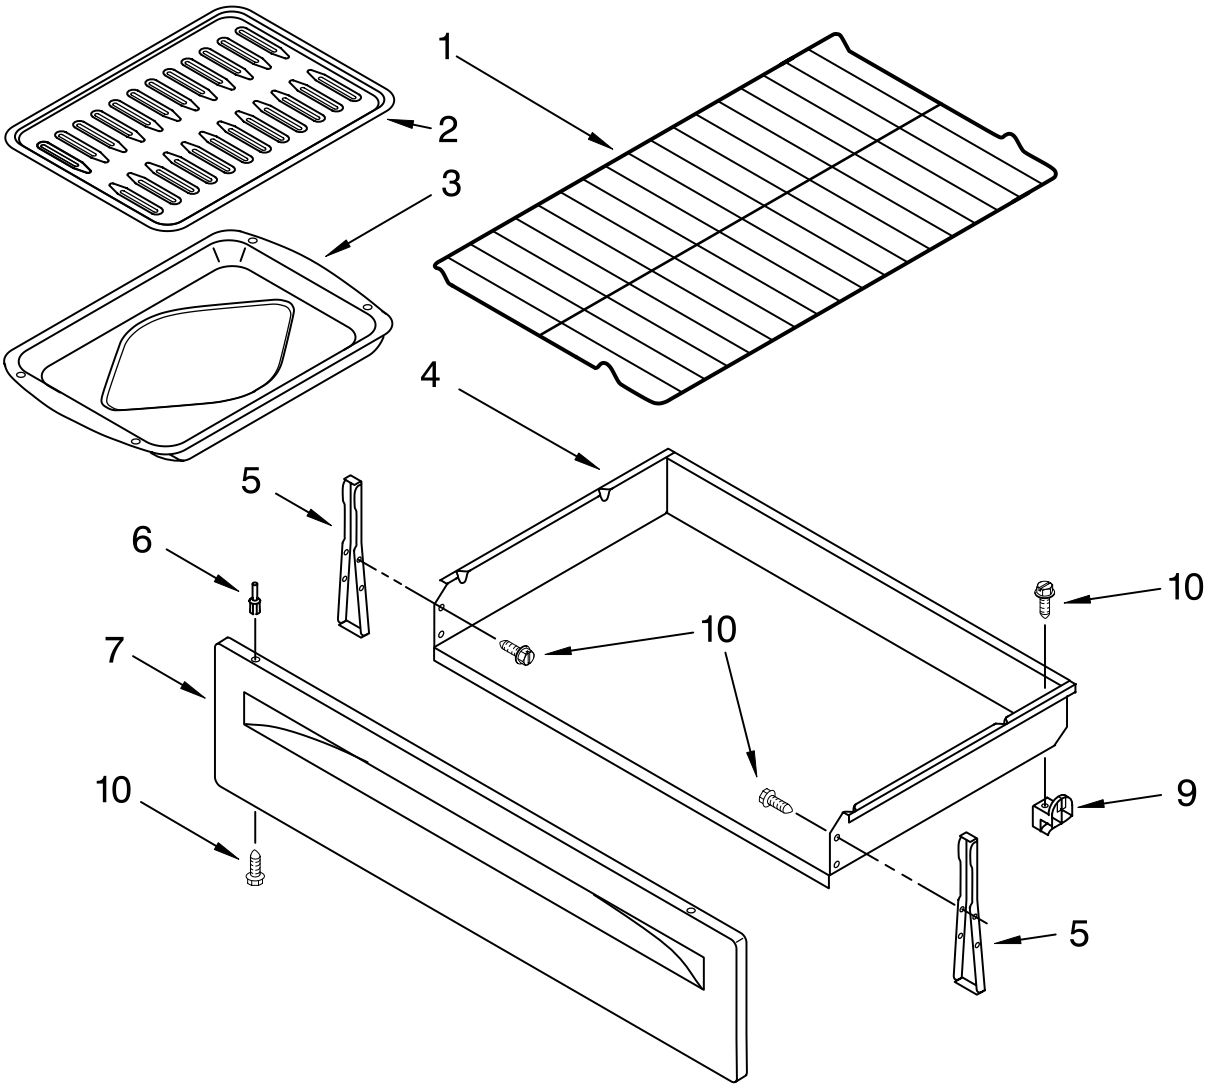

Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	3195996	Grill, Broiler
3	3196076	Pan, Broiler
4	8272605	Drawer, Storage
5	3196816	Bracket, Drawer(2)
6		Rivet, Push (2)
	3196814	White
	3196815	Almond
7		Panel, Drawer Frnt
	8053339	White
	8272501	Biscuit
9	8053334	Glide, Drawer (2)
10	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Model: RF364PXMW0, RF364PXMQ0, RF364PXMT0, RF364PXMV0
(White) (Designer White)(Designer Biscuit) (Biscuit)

Illus. No.	Part No.	DESCRIPTION

Following Parts Not Illustrated

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150° c
8316781	Wire, Black 14 Ga. 150°c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242829	Wire, Red 12 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242826	Wire, White 14 Ga. 150°c
242827	Wire, Yellow 14 Ga. 150°c
242832	Wire, Yellow 14 Ga. 200°c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean(1/2 Pt)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
240132	Insulation, Fiberglass (2−1/2"
313660	Clip, Ground Wire x 22" x 120")

PAINT, TOUCH−UP (1/2oz.)

72017	White
72107	Almond
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3191048	Cleaner, Glass

ANTI−TIP KIT

3176830	Anti−Tip Kit

WIRING HARNESS PARTS

8524088	Harness, Wire (Cooktop Left)
8524089	Harness, Wire (Cooktop Right)
4454062	Harness, Wire (Rckr−1 Hot)
3196520	Clip, Wire Harness
4454241	Harness, Wire (Sensor)
3196696	Clip, Wire Harness
8523718	Harness, Wire (Door Switch)
8524132	Shield, Wiring
8524114	Relief, Strain
8523279	Wire, Ground
313660	Clip, Ground Wire
3196173	Screw
3196154	Screw, Ground

Miscellaneous

814381	Pin Kit−Dr Removal